

# SWITCHING SYSTEM 110

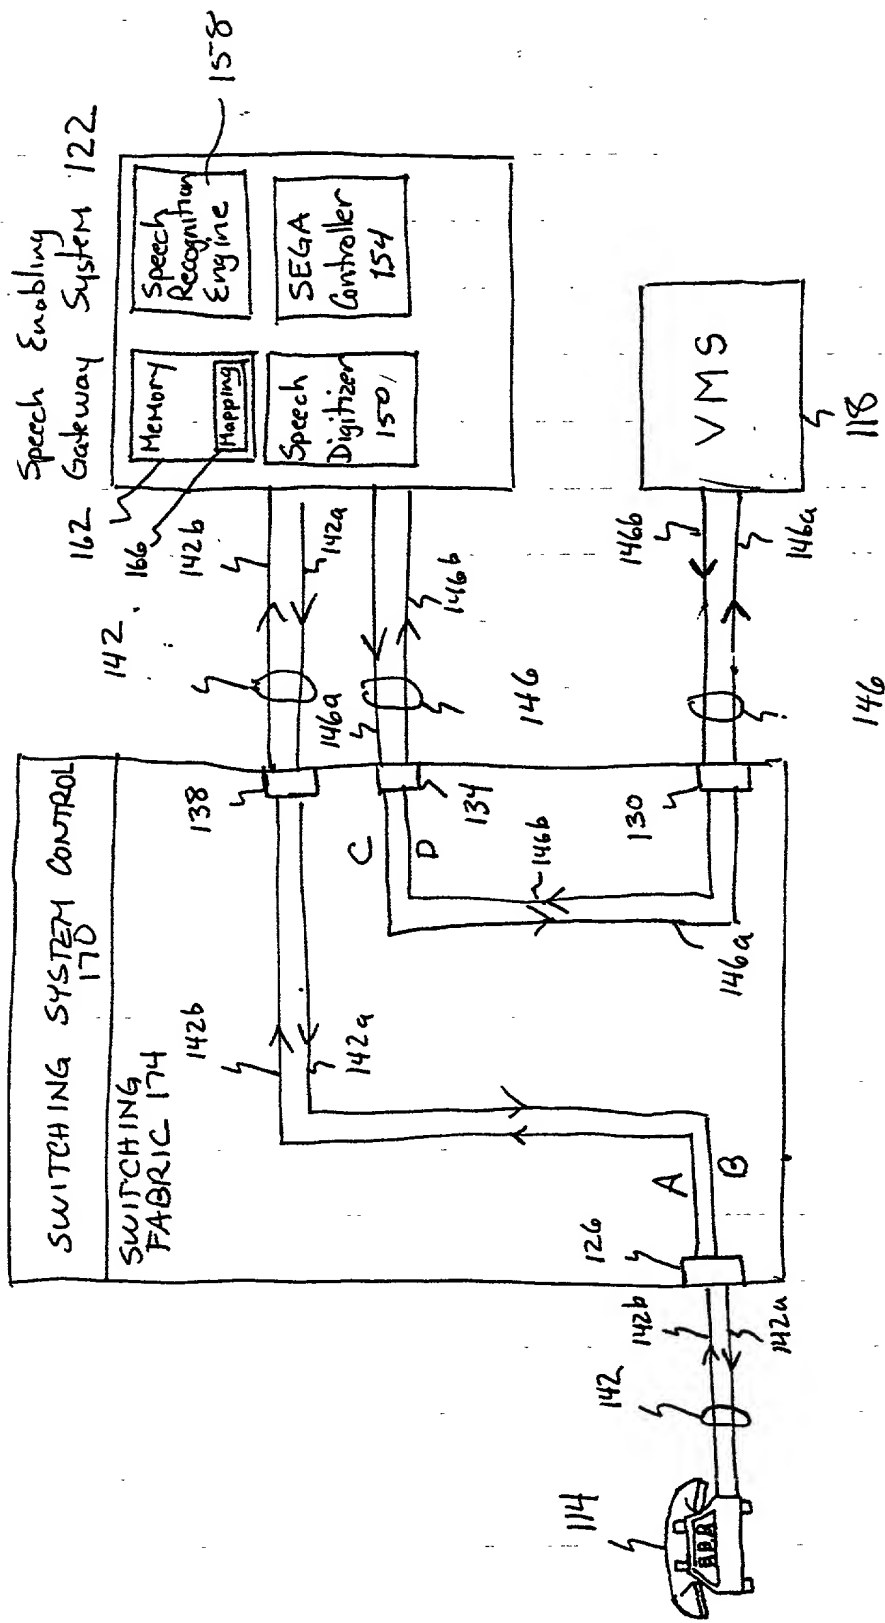


FIG. 1

FIG. 2A

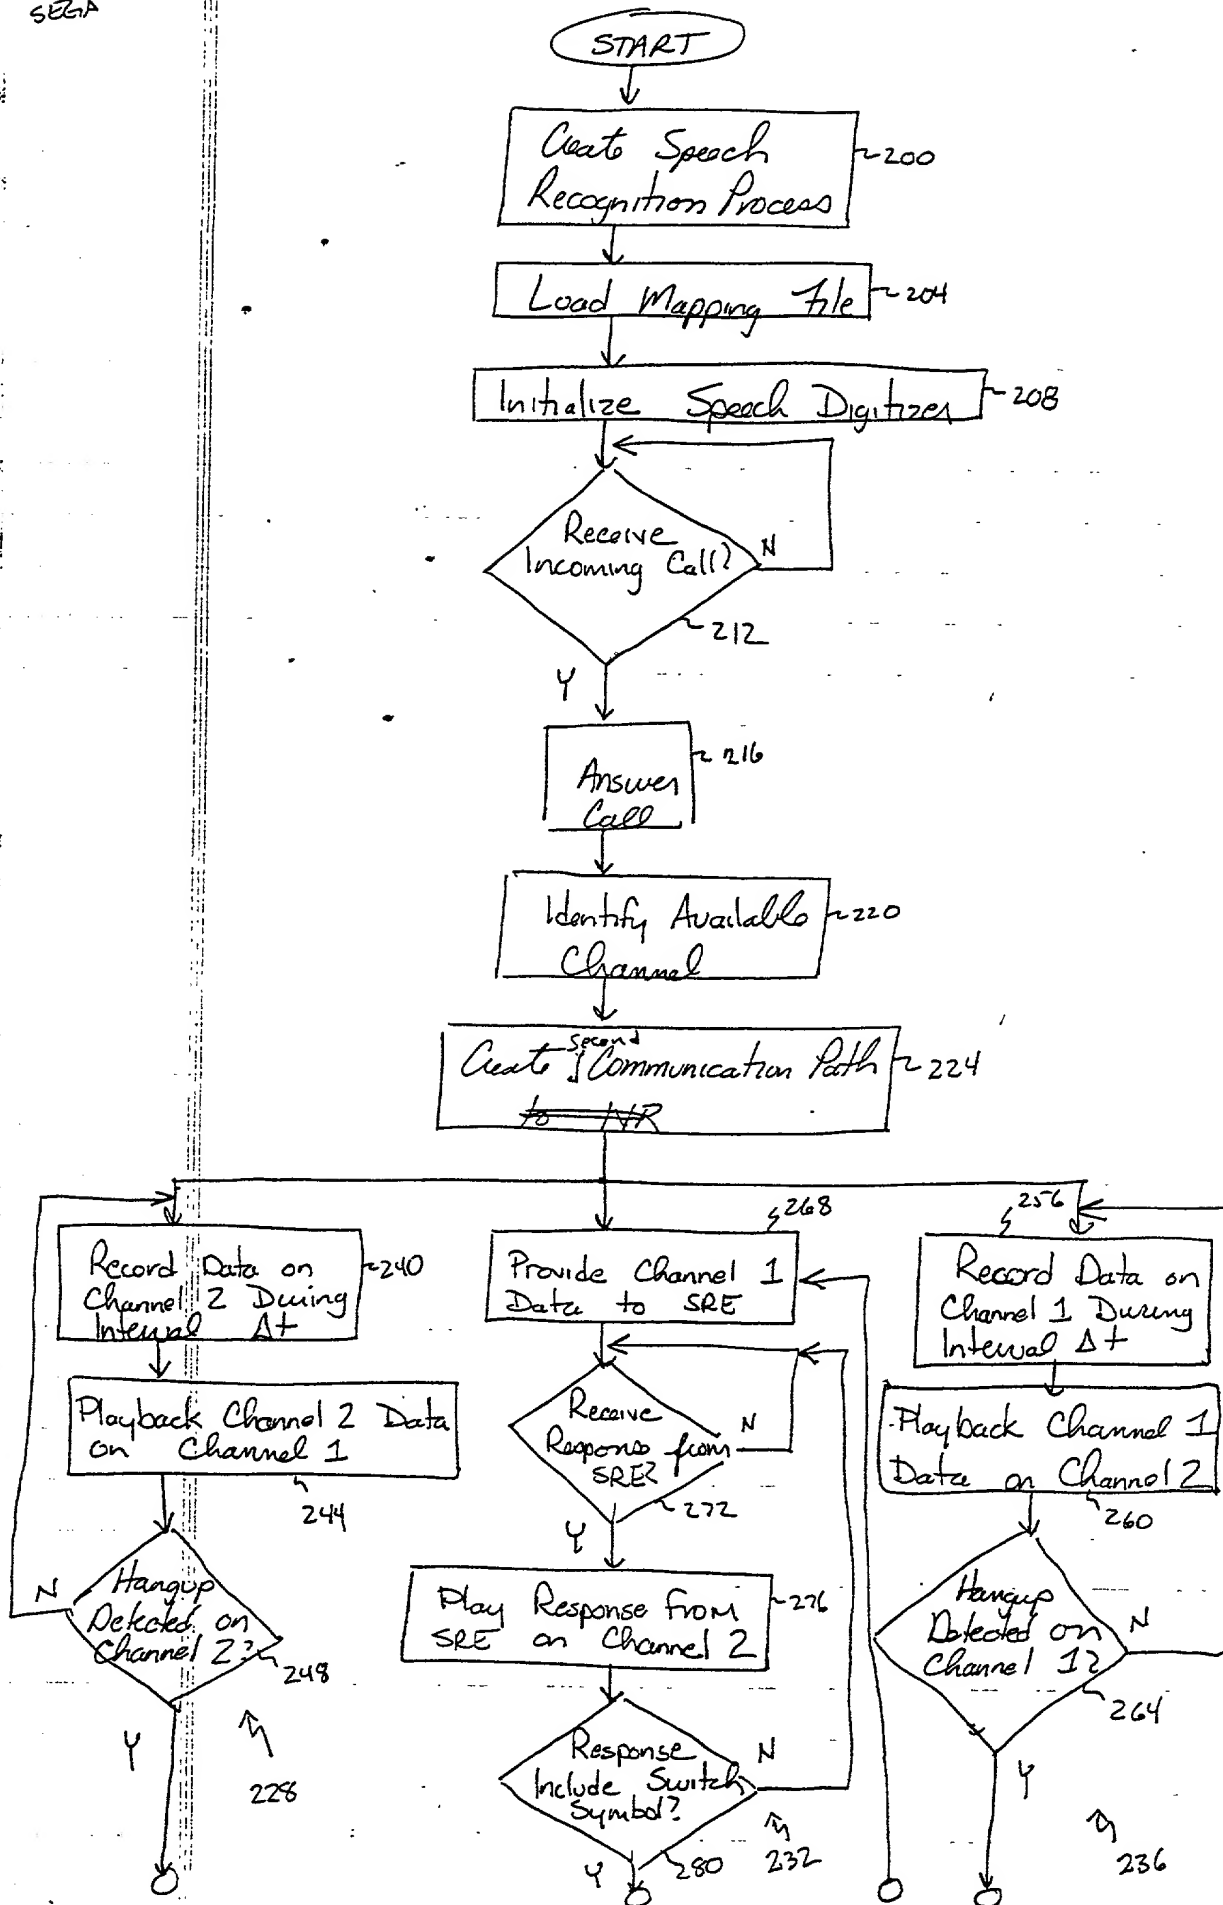
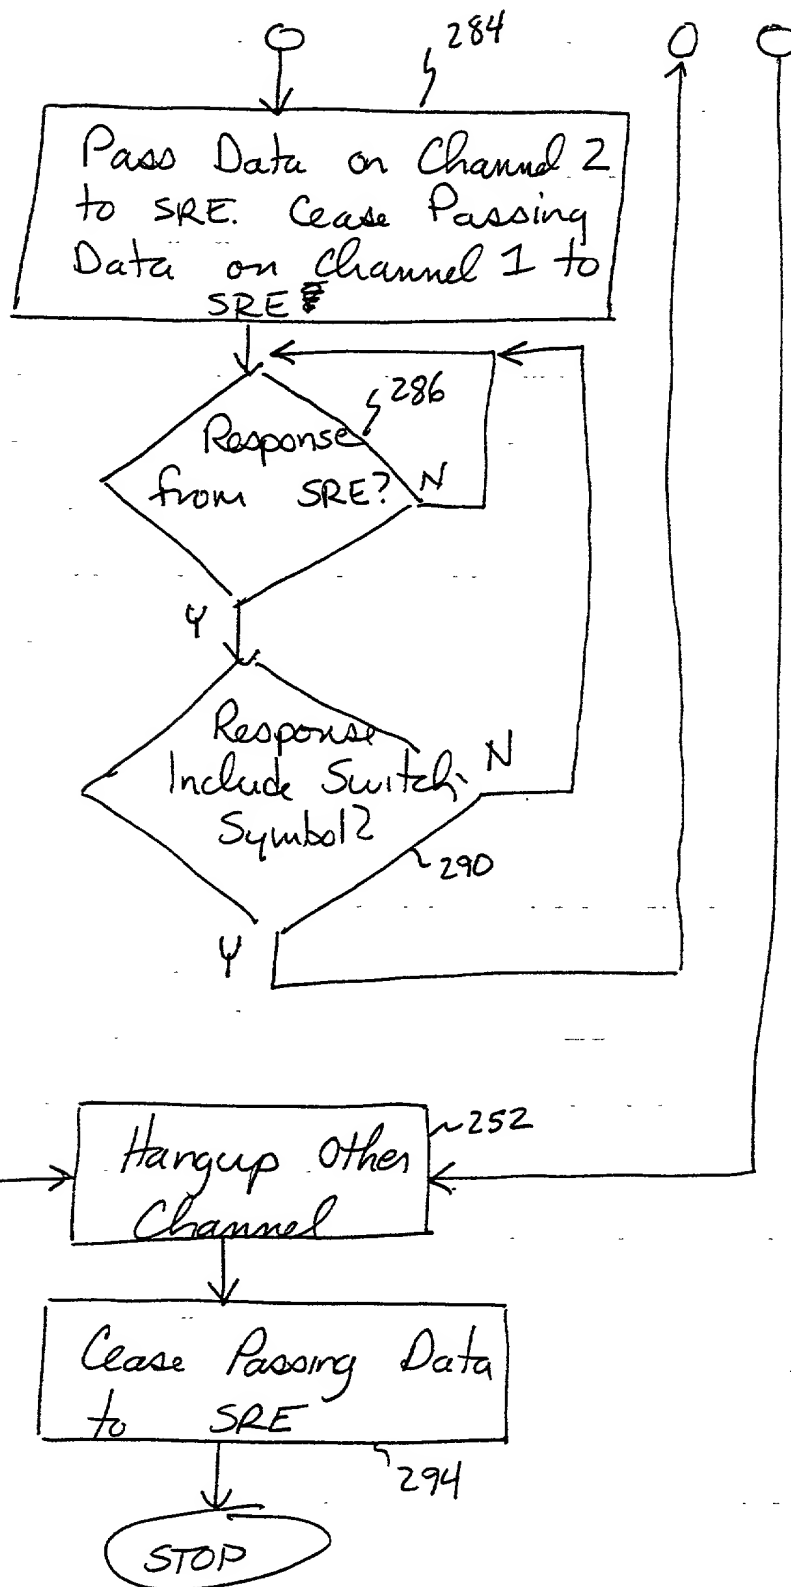


FIG. 2B



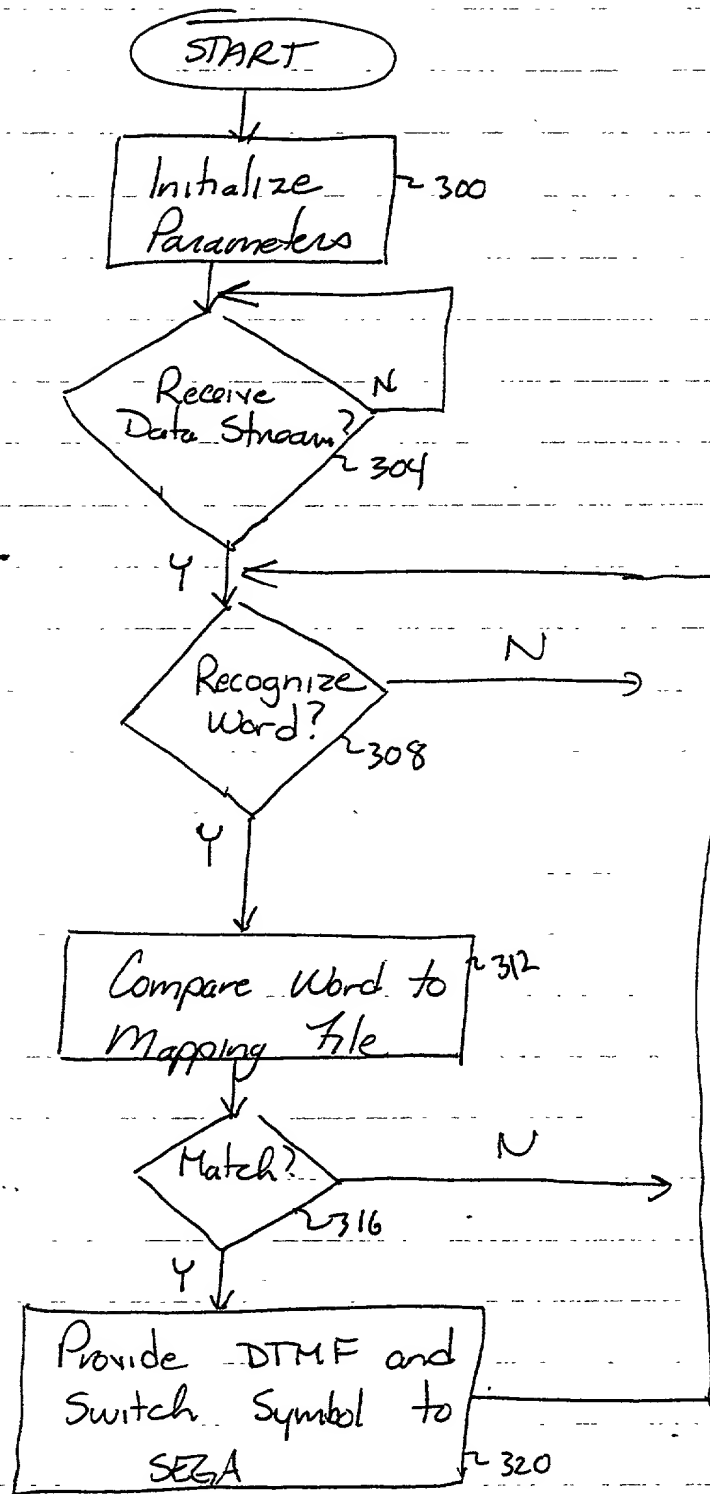


FIG. 3

400  
⚡

FIGURE 4 ⚡

404  
⚡408  
⚡

⚡ 412

A ~	Play   Review   'Listen to'	New	messages	11
B ~	Play   Review   'Listen to'	Saved	messages	12
C ~	Delete   Erase	message		337
D ~	Save	message		339
E ~	Next   Skip	message		#
F ~	Repeat   Replay	message		334
G ~	Envelope	Information		335
H ~	Forward	message		336
I ~	Record	a	Reply	338
J ~	Record	a	New Message	2
K ~		Options		0
L ~		Mark it	Urgent	2
M ~			Confirmation	3
N ~		Mark it	Private	1
O ~		Send	message	#
P ~	'Main Menu'			33*
Q ~	Cancel   Finished			*
R ~	Pound			#
S ~	Star			*
T ~	Goodbye   Hang-up   Exit			***
U ~	Any 4 digit number - i.e. mailbox or ext.			4 digit number